


(1)X1	(2)X1	(3)X1 (L)X1 (R)
BACK	SEAT & MECHANISM	LARM LEFT ARM RARM RIGHT ARM
(4)X5	(5)X1	(6)X1
CASTERS	GASLIFT	BASE
(A)x3	() M	8*18 L-bar Screw
(B)x4	(o)	asket
(C)x4	<u>Прттт</u>	8*45 Arm Screw
(D)x4	( <u>)</u>	rm Cap
(E)x2	A	llen key

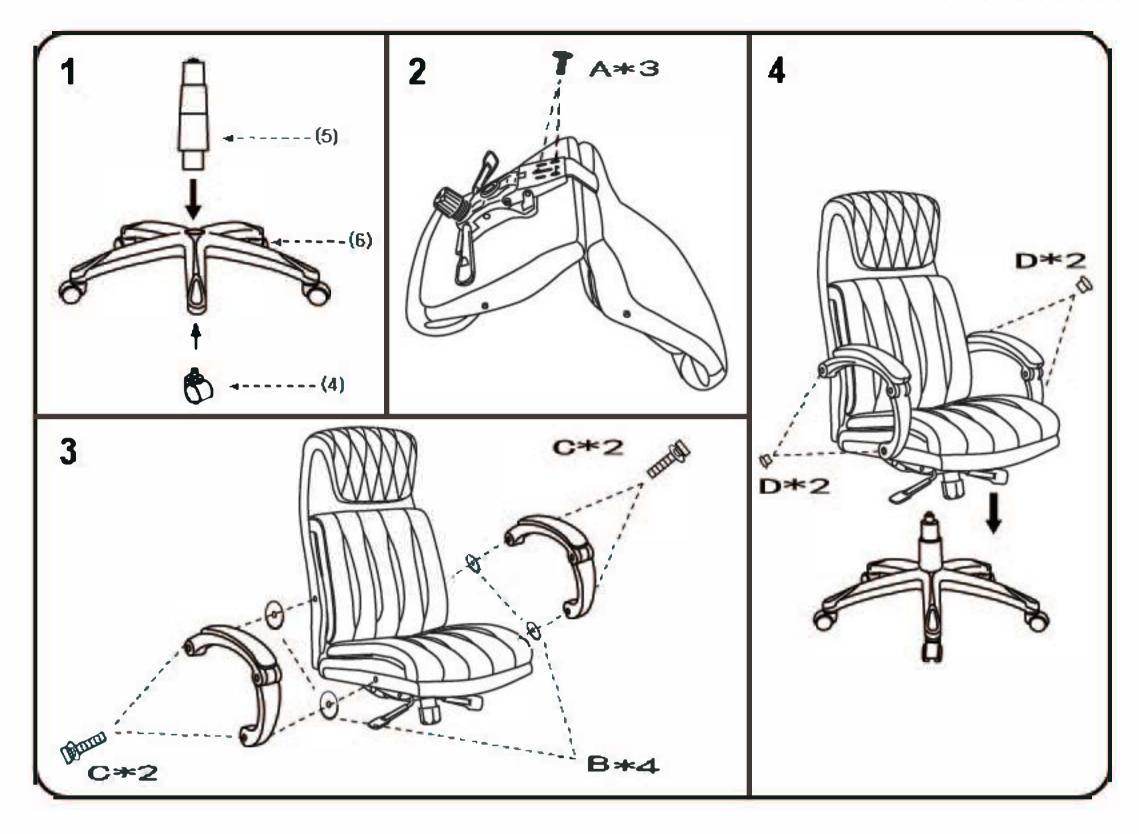

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

