




POR ASSEMBLY INSTRUCTION

IMPORTANT NOTE:

%PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFCE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED. **%KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP. ※DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.**

| PARTS LIST & HARDWARE LIST | | | | | |
|----------------------------|---------------------|----------------------|------------------------|-----------------------------------|--------------|
| 1:HEAD BOARD 1pc | 2:FOOT BOARD 1PC | 3: SIDE RAIL 2PCS | 4:SLAT 12PC | 5: SINGLE PLASTIC CAP 24PCS | 6:LEG 4PCS |
| 7:SLAT 1PC | | | | | |
| A:BOLT 4PCS | B:BOLT 8PCS | C:SPRING WASHER | D:FLAT WASHER 12PCS | E:ALLEN KEY 1PC M8 | F:Screw 2PCS |
| G:ALLEN KEY 1PC | | | | | |
| | | | | | |

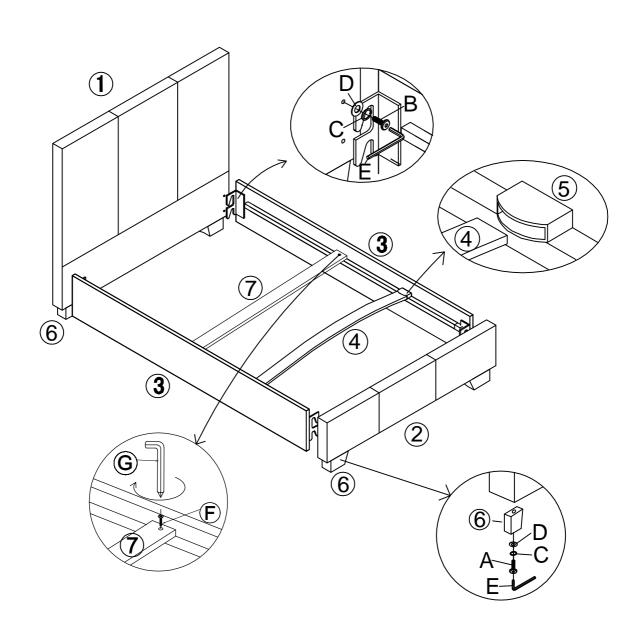

STEP 1 :FIXING LEGS TO HEADBOARD AND FOOTBOARD;

- STEP 2 : FIXING SUPPORT LEGS TO CENTR SUPPORT BAR;
- STEP 3 :FIXING SIDE RAILS AND CENTRE SUPPORT BAR TO HEADBOARD AND FOOTBOARD;
- STEP 4 :ONCE SLAT ASSEMBLED POSITION PEGS ON THE BASE OF CAPS INTO CORRESPONDING HOLES ON THE SIDE RAILS AND CENTRAL SUPPORT BAR,THEN CAREFULLY PRESS DOMN ON CAPS TO SECURE.