

**English**

# COMPUTER TABLE

## ASSEMBLY INSTRUCTION

Thanks for purchasing one of our products, please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place).

**TWO PEOPLE REQUIRED****MODEL CT-3567AN****General Care:**



-Keep your furniture out direct sunlight-Use desk pads and coasters to protect the surface from dents, scratches, and moisture from hot or cold liquids.


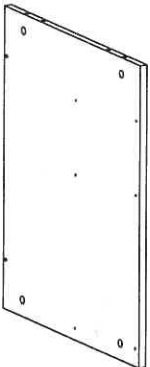
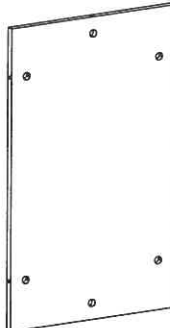











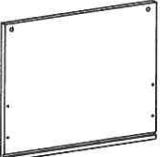
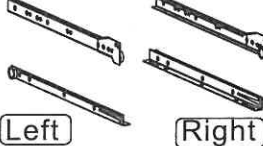

**Cleaning:**


-For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth.  
-Window cleaning liquid or a similar cleaning liquid can be used to clean glass surface.

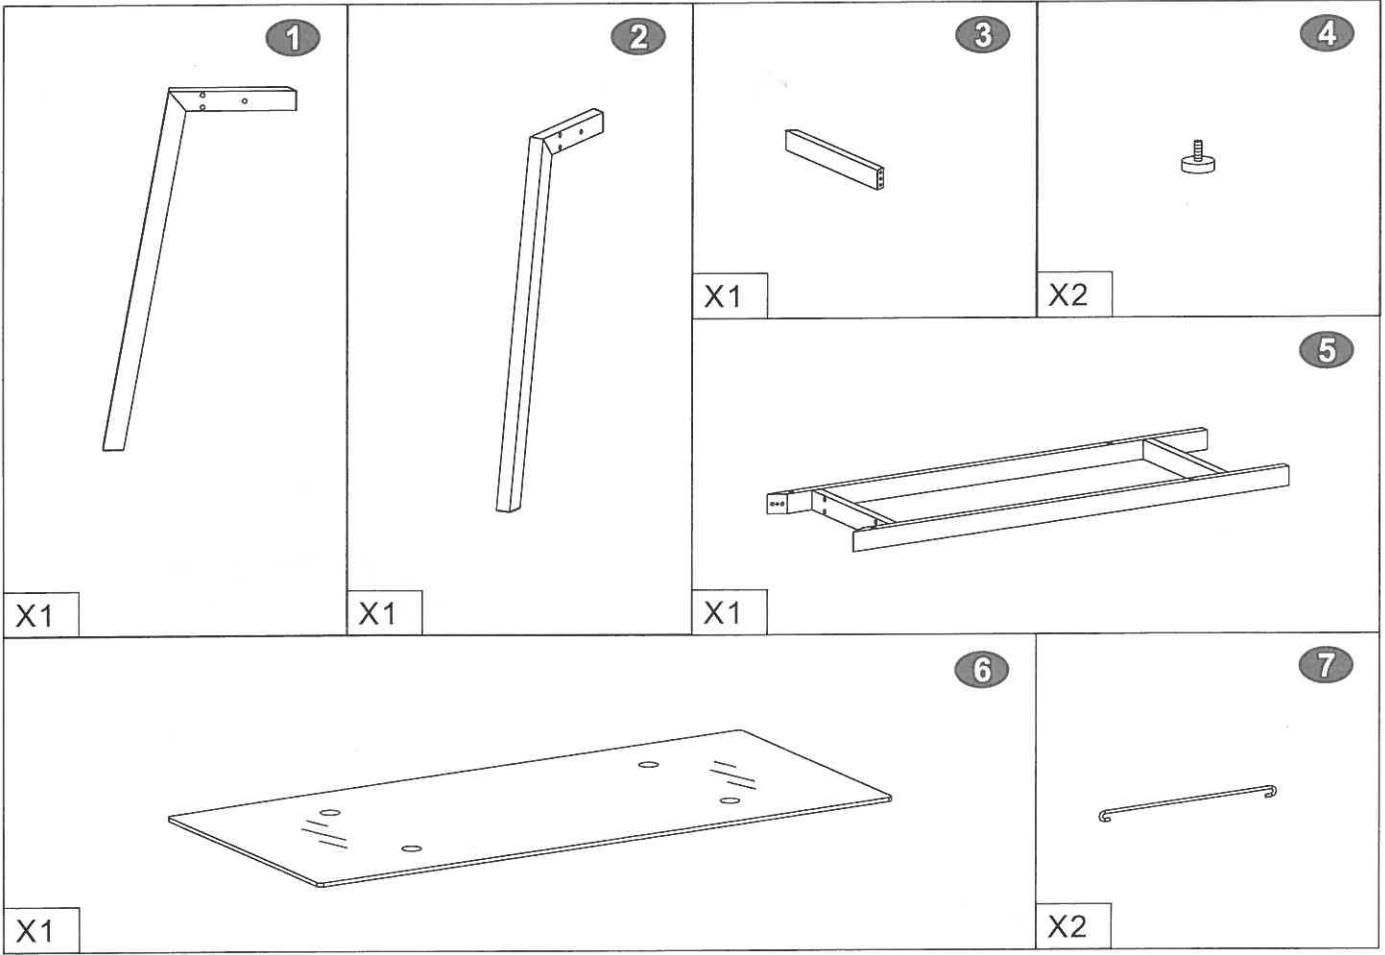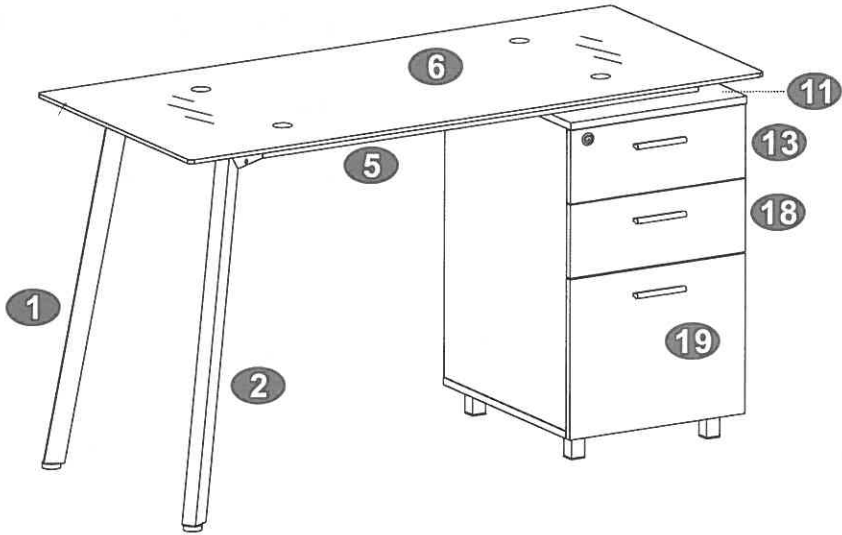















▀ PARTS LIST

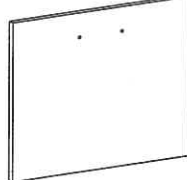




<p>8</p>  <p>X1</p>	<p>9</p>  <p>X1</p>	<p>10</p>  <p>X1</p>	<p>11</p>  <p>X1</p> <p>12</p>  <p>X1</p>
<p>13</p>  <p>X1</p>	<p>14</p>  <p>X2</p>	<p>15</p>  <p>X2</p>	<p>16</p>  <p>X3</p>
<p>17</p>  <p>X2</p>	<p>18</p>  <p>X1</p>	<p>19</p>  <p>X1</p>	<p>20</p>  <p>X1</p>
<p>21</p>  <p>X1</p>	<p>22</p>  <p>X1</p>	<p>23</p>  <p>Left</p> <p>Right</p> <p>X3</p>	<p>24</p>  <p>X8</p>

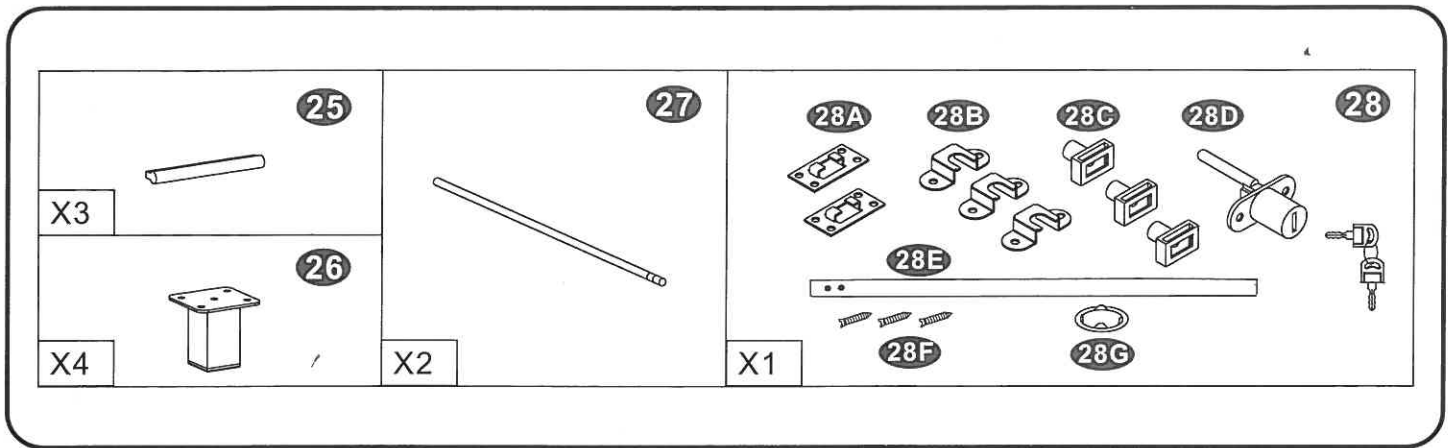

▪SCREWS LIST


PART	QTY.	ITEM		PART	QTY.	ITEM	
<b>A</b>	56	3X15 MM		<b>I</b>	2	6X45 MM	
<b>B</b>	14	6X40 MM		<b>J</b>	6	Φ16MM	
<b>C</b>	2	6X60 MM		<b>K</b>	6	4X20 MM	
<b>D</b>	6	6X40 MM		<b>L</b>	8	8X30 MM	
<b>E</b>	12	4X35 MM		<b>M</b>	14	Φ15 MM	
<b>F</b>	16	4X14 MM			1		
<b>G</b>	8	6X15 MM					
<b>H</b>	8	6X30 MM					

6X40MM BOLT INSTALLATION AS BELOW:

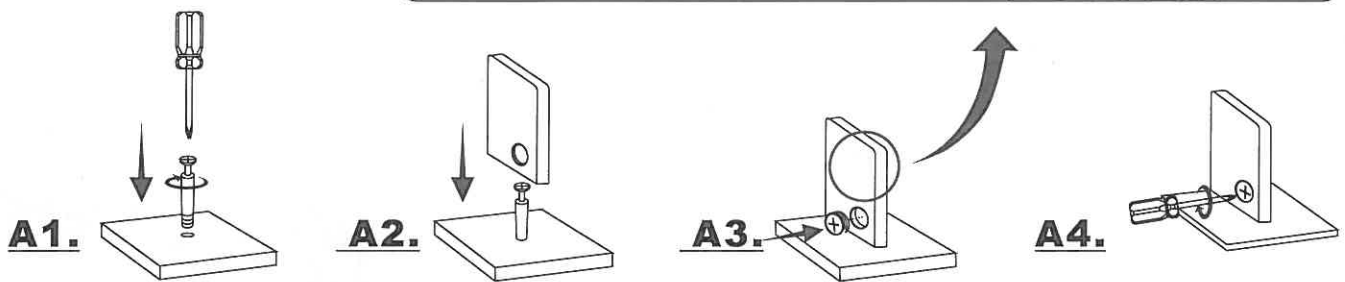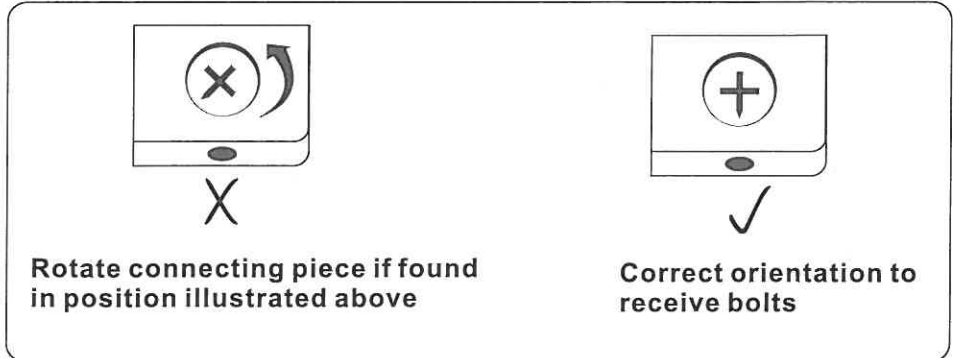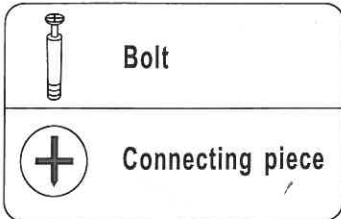

ASSEMBLY STEPS:

1

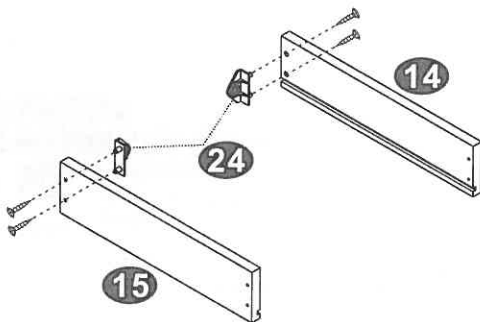


**-SCREWS**

**A 3X15 MM**

**4PCS**

2

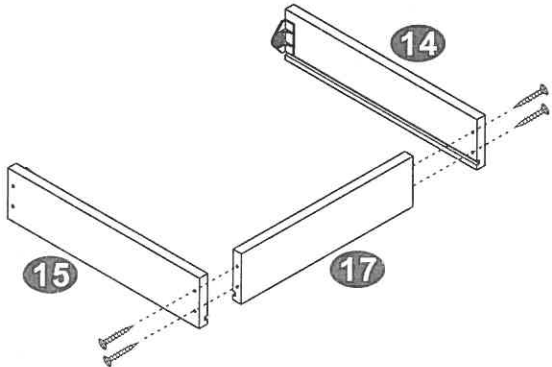


**-SCREWS**


**E 4X35 MM**

**4PCS**

3

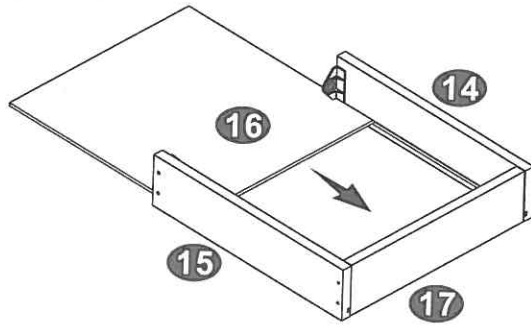

4

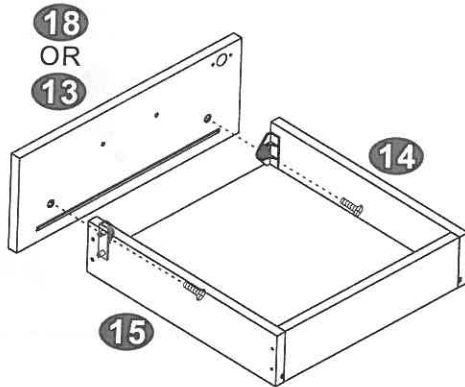


-SCREWS

**G** 6X15 MM

2PCS



5

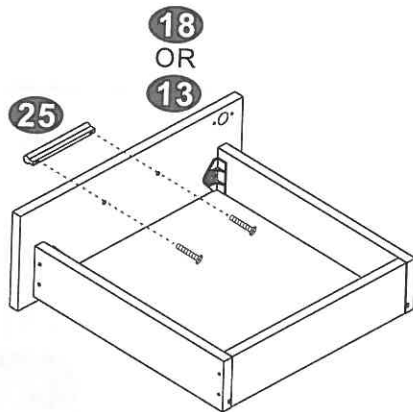


-SCREWS

**K** 4X20 MM

2PCS



6

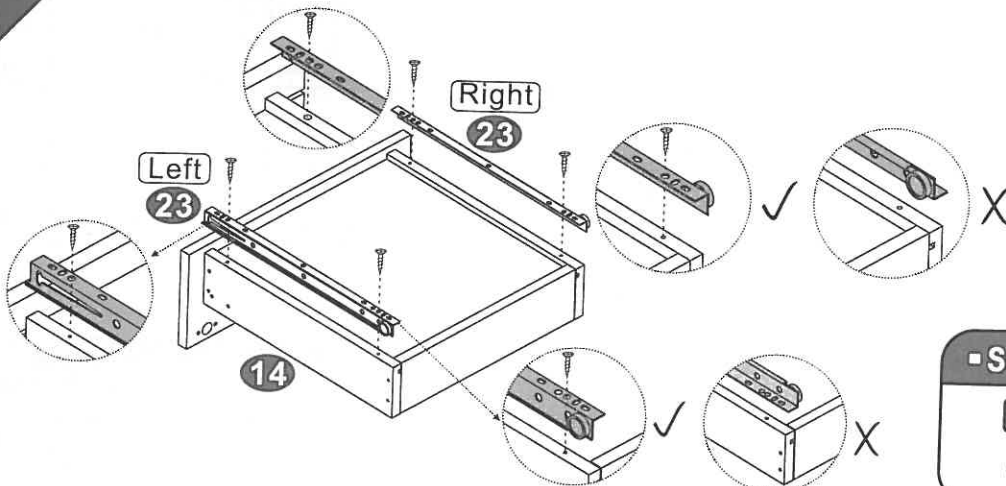





-SCREWS

**A** 3X15 MM



4PCS




7

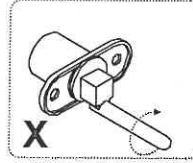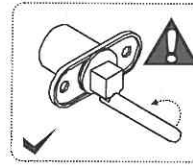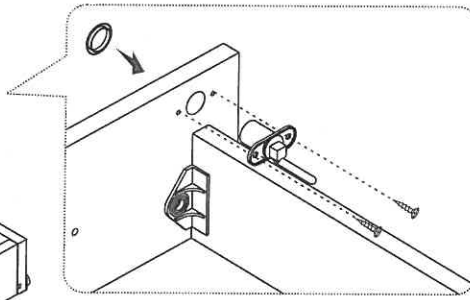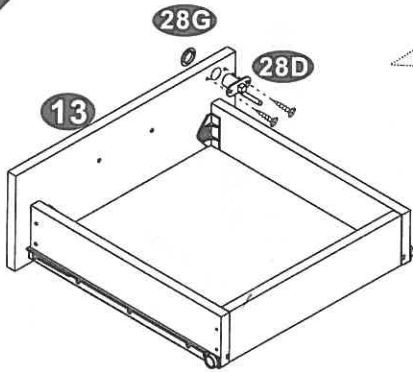



**-SCREWS**

**A** 3X15 MM  2PCS 


8

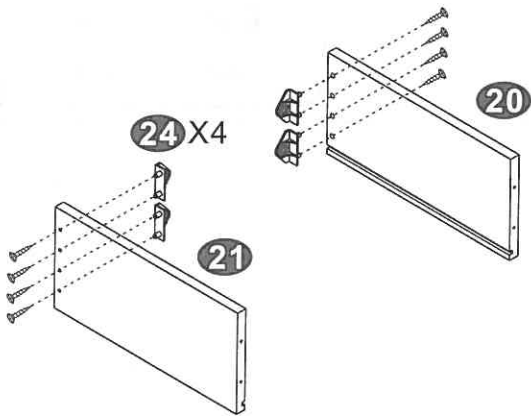



**-SCREWS**

**A** 3X15 MM  8PCS 


9

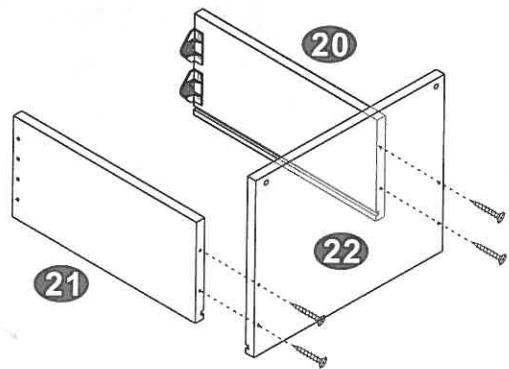


**-SCREWS**

**E** 4X35 MM  4PCS 

10

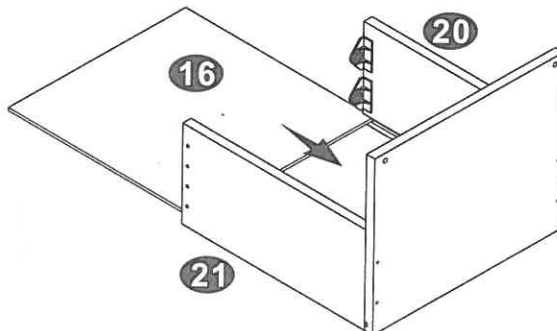

11

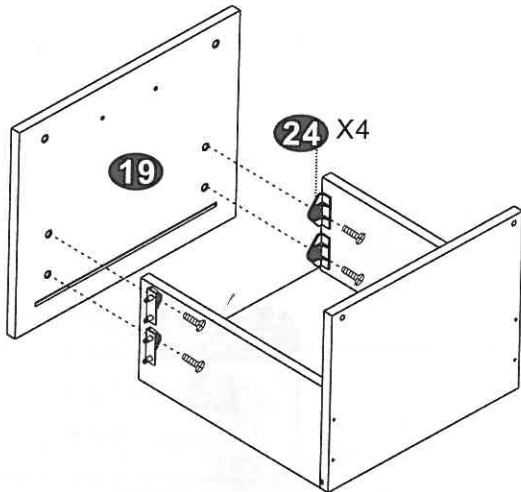


• SCREWS

**G** 6X15 MM

4PCS




12

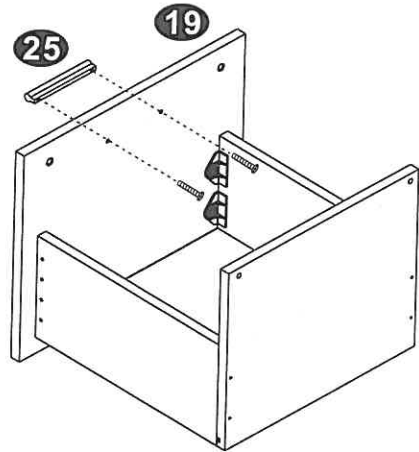


• SCREWS

**K** 4X20 MM

2PCS




13

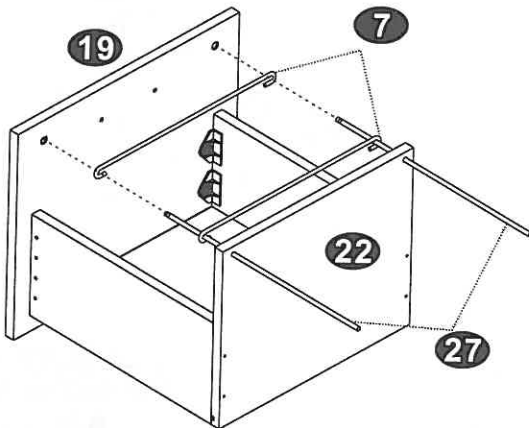

▲ Be careful not to overtighten the metal rod

14

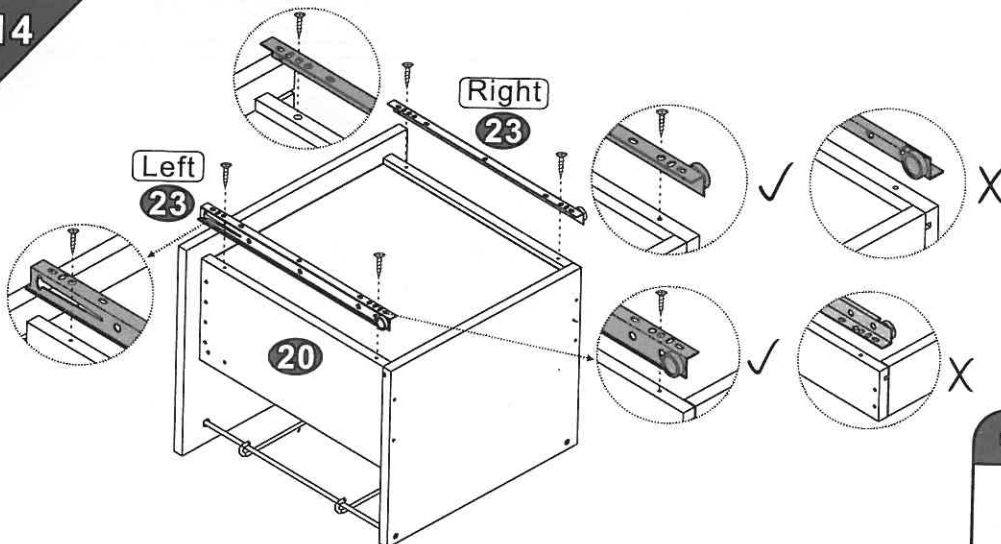

• SCREWS


**A** 3X15 MM

4PCS





15

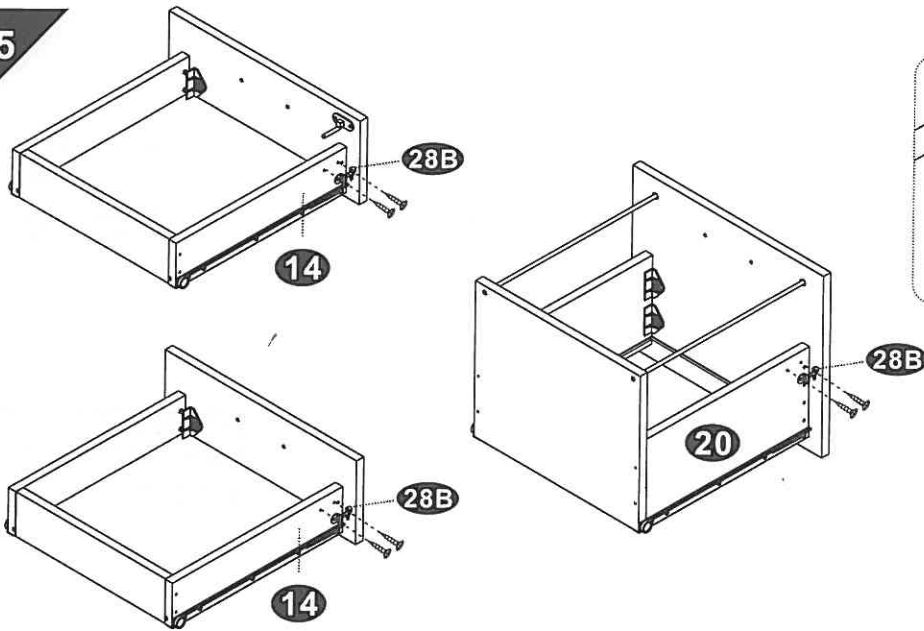


-SCREWS

A 3X15 MM


6PCS



16

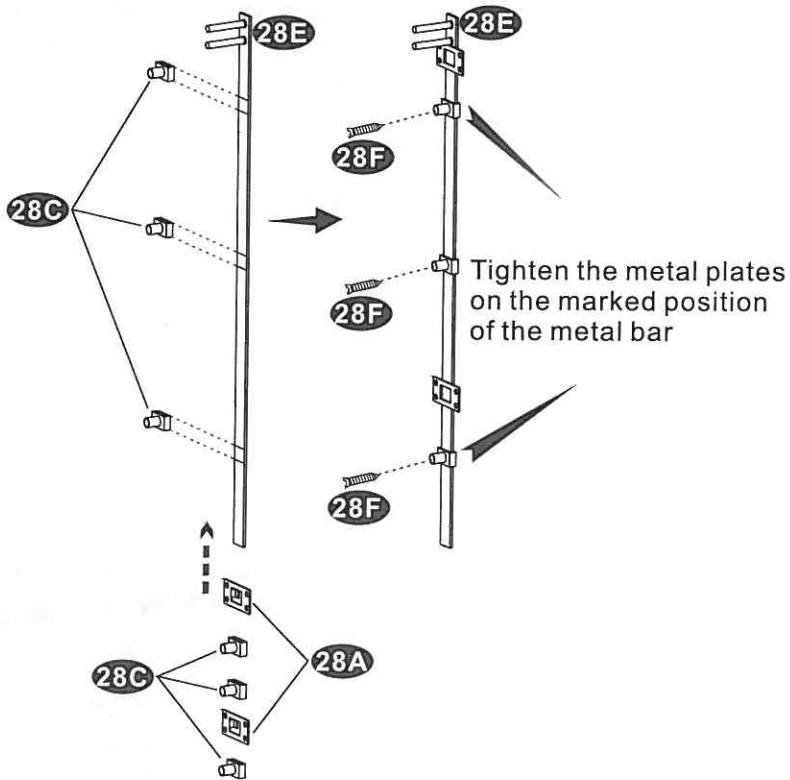

17

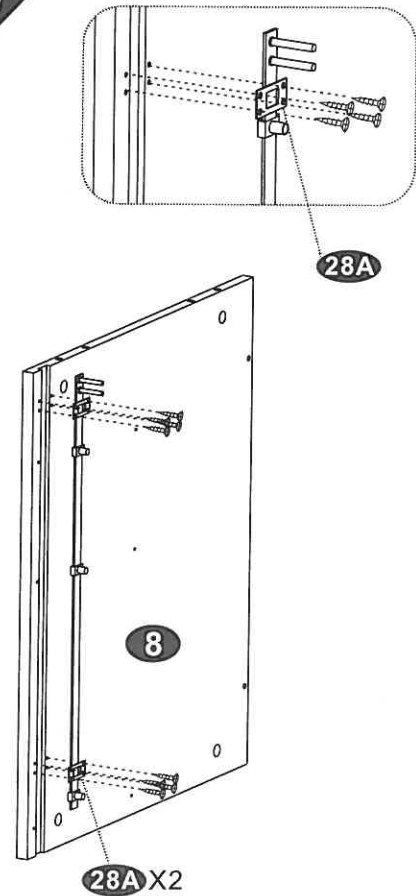



-SCREWS

A 3X15 MM

8PCS



18

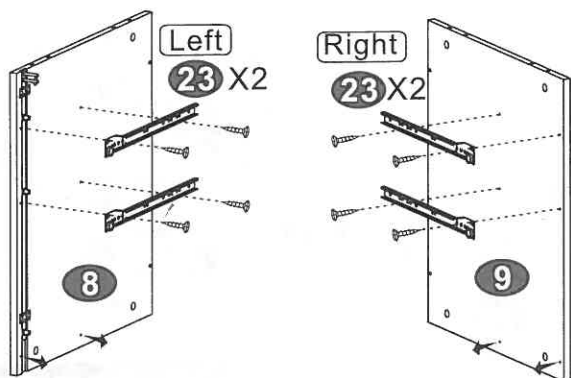



-SCREWS

**A** 3X15 MM

8PCS



19

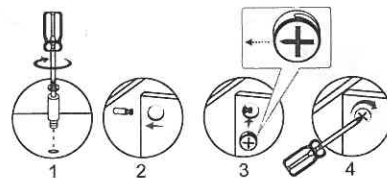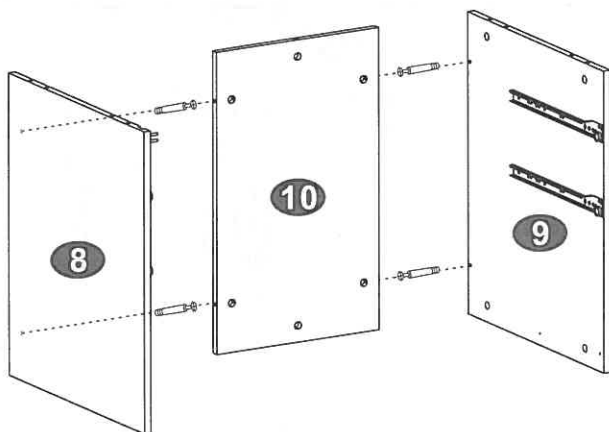

-SCREWS

**B** 6X40 MM



4PCS

**M**  $\Phi$ 15 MM

4PCS



20

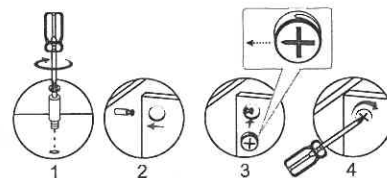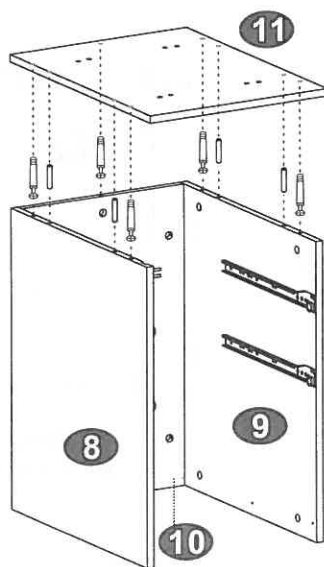

-SCREWS

**B** 6X40 MM


5PCS

**M**  $\Phi$ 15 MM



5PCS

**L** 8X30 MM

4PCS

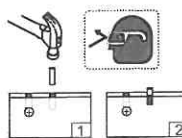

21

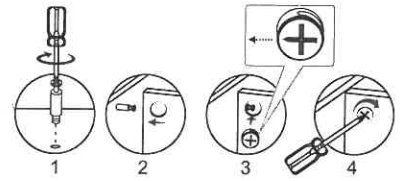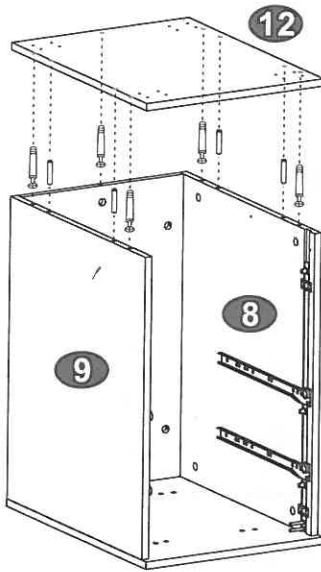

- SCREWS

**B** 6X40 MM


5PCS

**M**  $\Phi$ 15 MM


5PCS

**L** 8X30 MM

4PCS

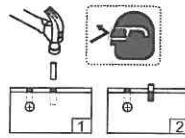

22


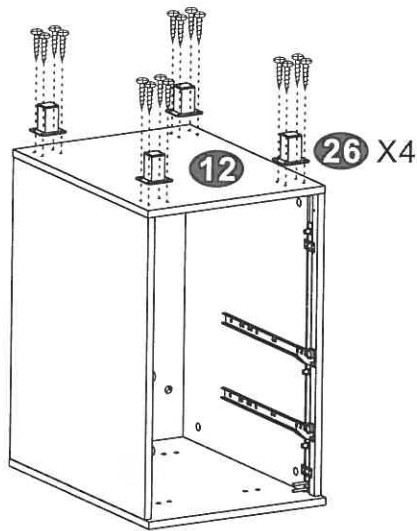


- SCREWS

**F** 4X14 MM

16PCS

23

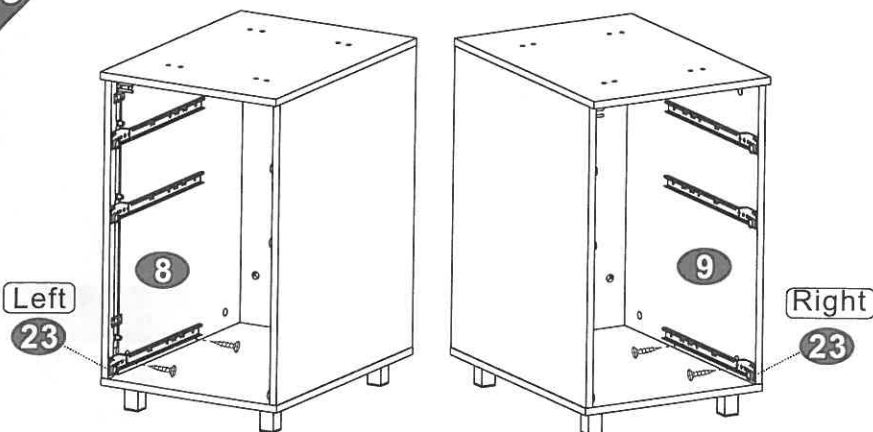


- SCREWS

**A** 3X15 MM

4PCS

24

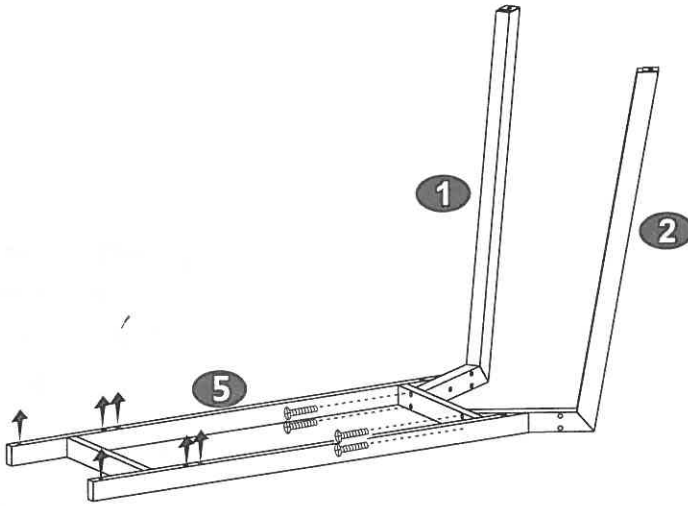


- SCREWS

**H** 6X30 MM

 4PCS



25

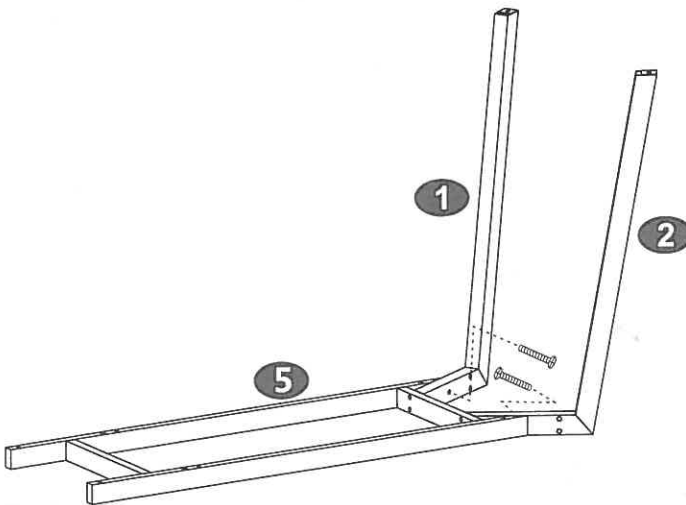


- SCREWS

**D** 6X40 MM

 2PCS




26

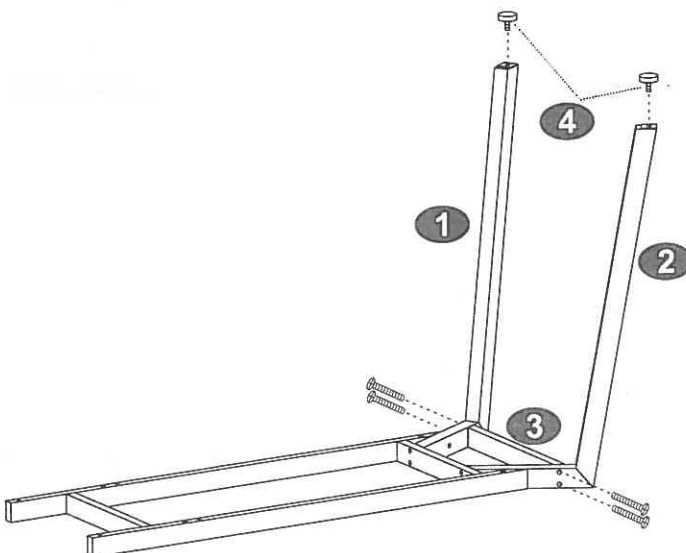

- SCREWS

**D** 6X40 MM


 4PCS



**\*\* There are 2 options to assemble our desk, please choose it according to your preference.**




**A1-A3**

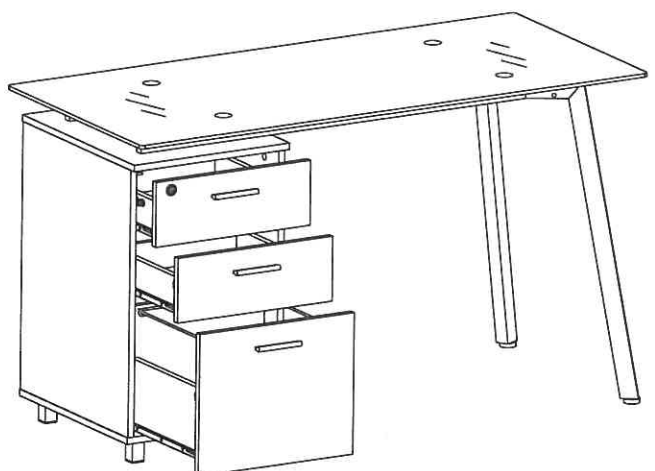


**B1-B4**

**A1**

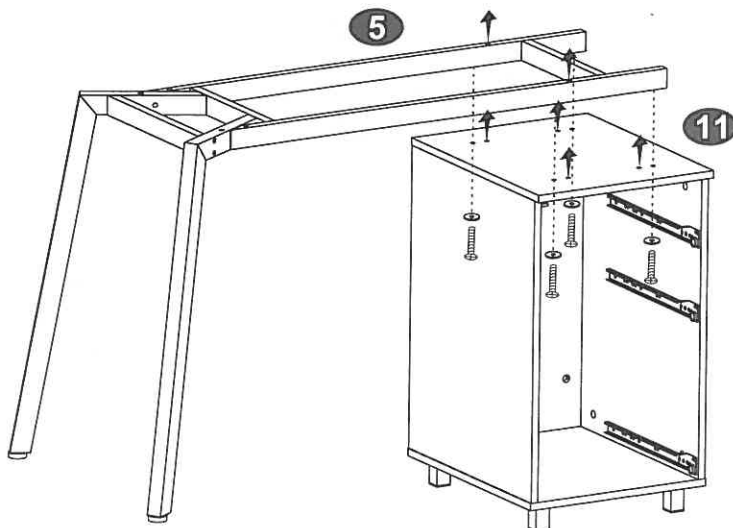

**-SCREWS**

**H** 6X30 MM


 4PCS

**J** Φ16MM

 4PCS




A2

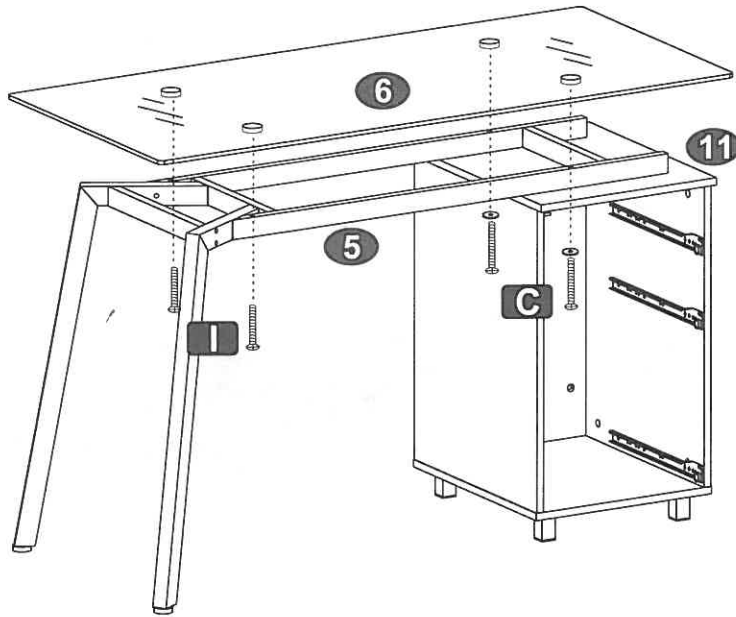


-SCREWS

**C** 6X60 MM

 2PCS



**I** 6X45 MM

 2PCS

**J**  $\Phi$ 16MM


 2PCS

A3

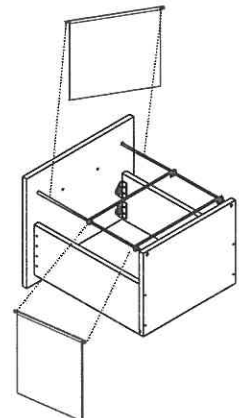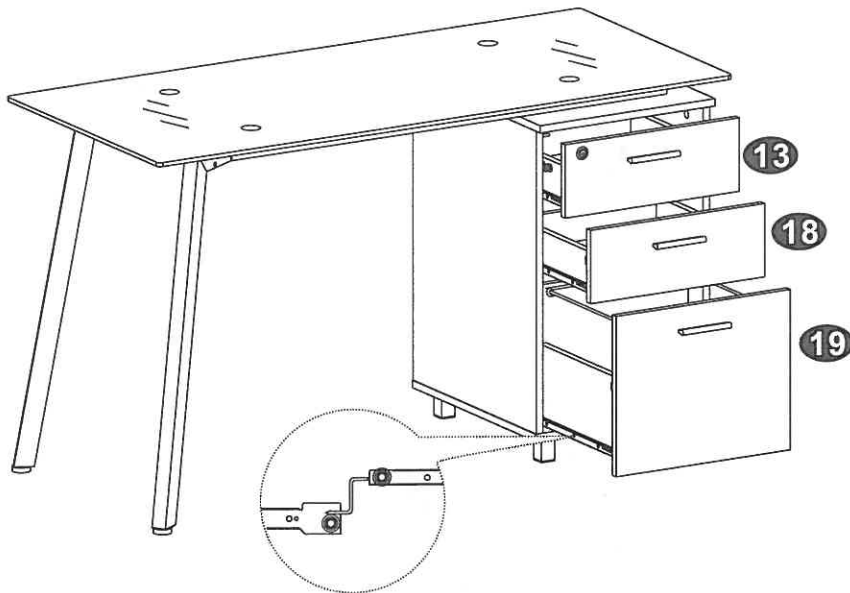


Please hang files on the movable metal hook part 7 or part 27

B1

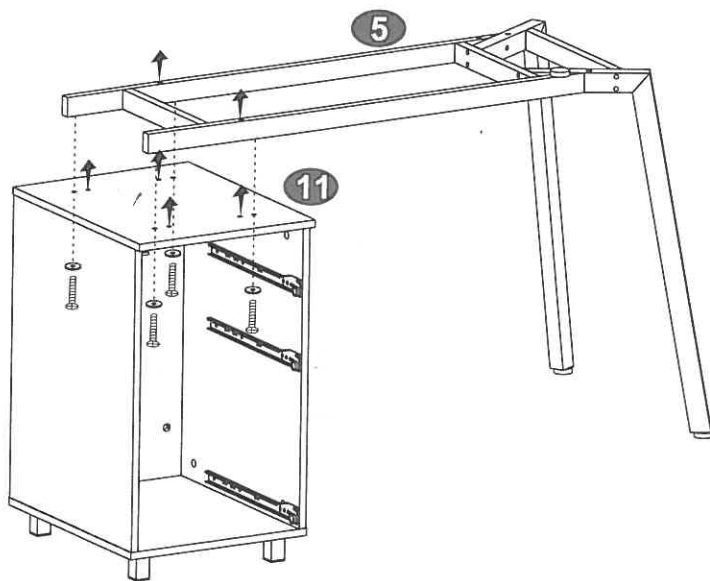

- SCREWS

**H** 6X30 MM


 4PCS



**J**  $\Phi$ 16MM


 4PCS

B2

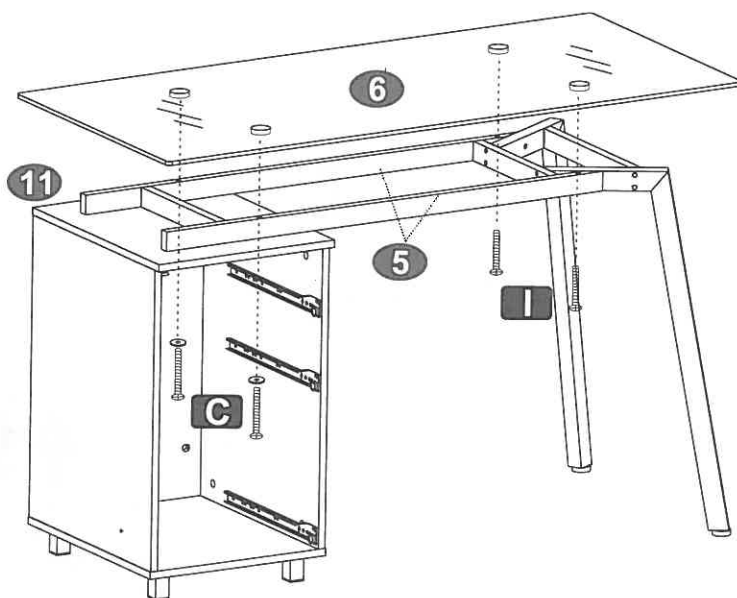


- SCREWS

**C** 6X60 MM

 2PCS



**I** 6X45 MM


 2PCS



**J**  $\Phi$ 16MM

 2PCS

B3

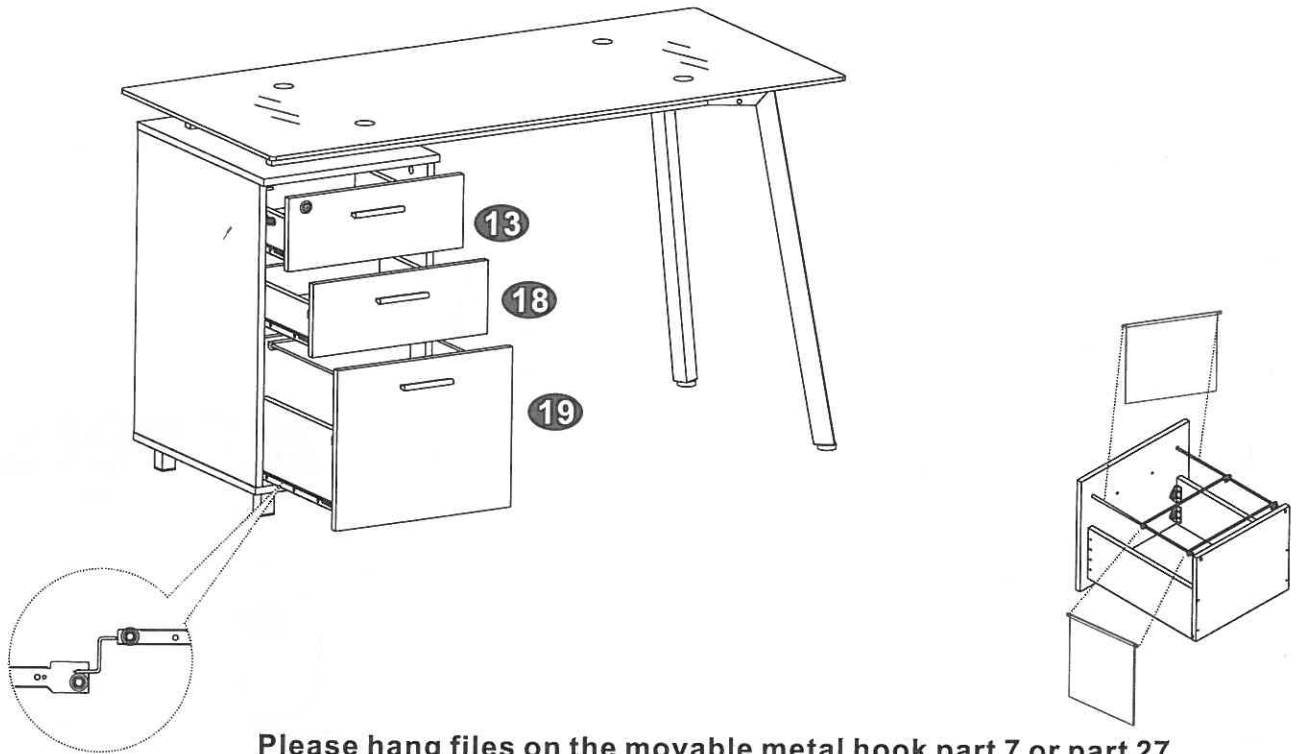

B4

